


Along with the headrail for your new double roller blind you will have received two metal brackets, four screws and two plastic bracket covers.

Installing the brackets only requires a screwdriver and is a simple process as follows:

### Step 1 -

Use two screws to attach a bracket at each end of the headrail as illustrated in the images to the right. The brackets are identical so can be used on either side.


The holes are pre-drilled into the correct positions at each side.

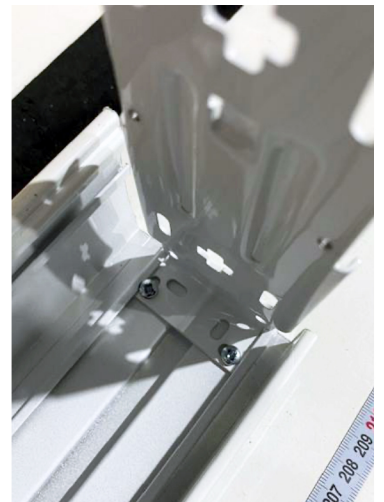


### Step 2 -

Once the metal brackets are securely attached, simply select the correct plastic bracket cover for each end of the blind and push them into place.

The correct positioning is illustrated below:

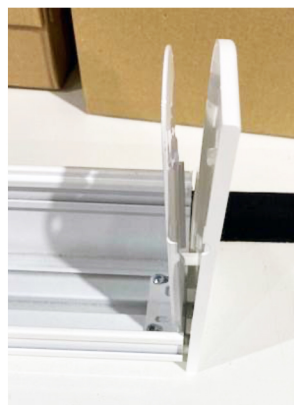

There are two bracket options for open cassette blinds, face fix and top fix. (as shown on the right)

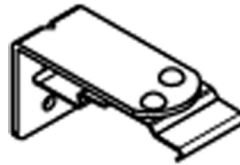


Face Fix Bracket




Top Fix Bracket

For a blind up to 1 metre wide attach two brackets fitted approximately 75mm (3") from each end of the blind (fig. 1). Any intermediate brackets should be spaced evenly between these and as a general rule:

- Up to 1m = 2 brackets
- 1m to 2m = 3 brackets
- 2m to 3m = 4 brackets
- Over 3m = 5 brackets

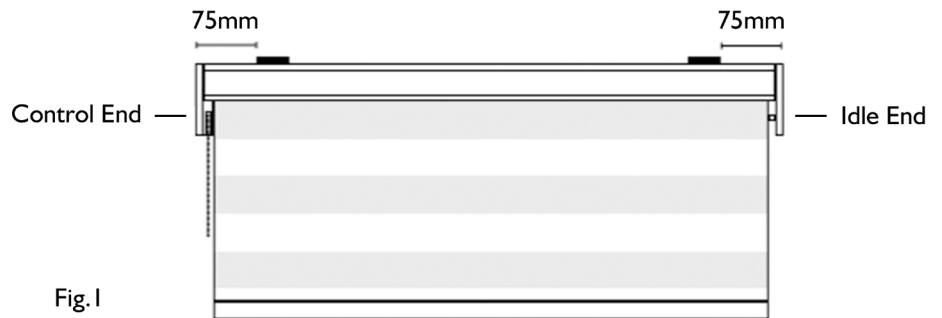

The bracket release lip on the bracket must face the back of the blind.

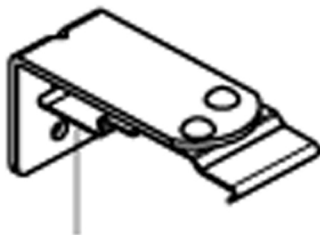

Release Lip




Release Lip


Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

### Fitting the cassette

Once all the brackets are in place offer the blind to the brackets. With the cassette tilted away from you locate the front lip into the bracket and push upwards to click the cassette into the back lip of the bracket.

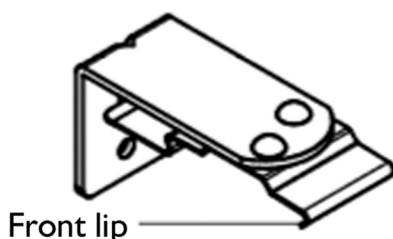

Front lip

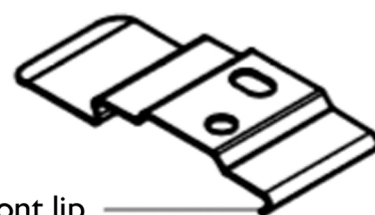

Front lip